

BC



Date Code Label  
Here

HBW Rideon EN 040616 **m0132**  
© Copyright Huffey Corporation 2017

# Owner's Manual for 6V BMW Ride On



**This manual contains important safety, assembly, operation and maintenance information.**

**Please read and fully understand this manual before operation.**

Save this manual for future reference.



**See back page for Customer Service Information**  
**Consulte el reverso para Servicio de Información al Cliente**  
**Voir pages verso pour des renseignements le service à la Clientèle**

# Owner's Manual Index

## Safety

- Warnings.....3-4
- User Requirements..... 5

## Assembly

- Parts Assembly View ..... 6
- Parts Assembly List ..... 7
- **DRIVE BATTERY FIRST CHARGE** ..... 8
- Drive Motor and Rear Wheel Installation .....9-10
- Front Wheel Installation ..... 11
- Steering Rod Installation ..... 12
- Connecting the Drive Battery..... 13
- Motor Cover Installation..... 14
- Seat Installation ..... 15
- Steering Wheel and Sound Effect Batteries ..... 16
- Side Mirror Installation..... 17

## Operation

- Door Lock Operation ..... 18
- Operation and Features..... 19


## Maintenance and Service

- General Information ..... 20
- Battery Fuse ..... 20
- Charging the Drive Battery ..... 21
- Battery Re-charge Interval and Time ..... 22
- Battery Storage..... 23
- Battery replacement and disposal ..... 23
- Troubleshooting Guide .....24-25


## Huffy Warranty

- Huffy Corporation Limited Warranty ..... 26

### Tools Needed for Assembly:



Small Phillips Screwdriver

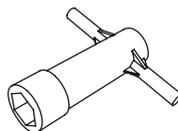

Spanner Socket (supplied)

## **⚠ WARNING**

The user must follow all safety rules and guidelines below or serious injury or death may occur to the user.

- Always use common sense and safe practices when using the vehicle. This vehicle is unsuitable for children under 3 years. The user must be 3 to 5 years, and weigh no more than 65 lbs (30kgs).
- This product contains small parts that are for adult assembly only. Keep small children away when assembling. Remove and dispose of all protective material and poly bags before assembly. Be sure to remove all packaging materials and parts from underneath the vehicle body.
- Always use the vehicle in a safe, secure environment with continuous adult supervision.
- Body parts such as hands, legs, hair and clothing can get caught in moving parts. Never place a body part near a moving part or wear loose clothing while using the vehicle. Always wear shoes when using vehicle.
- Use on flat, smooth paved surfaces only.
- Using the vehicle on or near streets, motor vehicle, drop-offs such as: steps, water (swimming pools), sloped surfaces, hills, wet areas, flammable vapors, in alleys, at night or in the dark could result in an accident.
- Do not use the vehicle in unsafe conditions such as snow, rain, loose dirt, mud sand or fine gravel. This may result in unexpected action such as tip over and skidding.
- This vehicle has no brakes. Motor friction will gradually stop the unit.
- Do not use the vehicle in an unsafe manner. Examples include but are not limited to:
  - Pulling the vehicle with another vehicle or similar device.
  - Allowing more than one rider.
  - Pushing the vehicle.
  - Traveling at an unsafe speed.
- There are additional hazards of using the vehicle in areas other than private grounds.
- Not to be used in traffic.
- The vehicle shall be used with caution since skill is required to avoid falls or collisions.
- Do not overload the vehicle.
- Do not tow anything behind the vehicle.
- Do not drive up steep slopes.
- Do not drive into fixed objects, which may cause the wheels to spin, causing the motor to overheat.
- Do not drive in very hot weather, components may overheat.
- Do not allow water or other liquids to come in contact with the battery or other electric components.
- Do not tamper with the electrical system. Doing so may create a short, causing the fuse to trip or other damage including fire.
- Child should always wear an approved helmet when using this product.

## ⚠️ WARNING - Charging the Drive Motor Battery

The following safety hazards may result in serious injury or death to the user of the vehicle:



- Use of a battery or charger other than the supplied rechargeable battery and charger may cause a fire or explosion. Only use the supplied rechargeable battery (or suitable replacement) and charger with the vehicle.



- Using the rechargeable battery and charger for any other product may result in overheating, fire or explosion. Never use the rechargeable battery and charger with another product.

- Explosion. Gases are created during charging. Charge the battery in a well ventilated area. Do not charge the battery near heat or flammable materials.



- Contact between the positive and negative terminals may result in fire or explosion. Avoid direct contact between the terminals. Picking up the battery by the wires or charger can cause damage to the battery and may result in a fire. Always pick up the battery by its case or handles.

- Battery must be handled by adults only. Liquids on the battery may cause fire or electric shock. Always keep all liquids away from the battery and keep the battery dry.

- Contact or exposure to battery leakage (lead acid) may cause serious injury. If contact or exposure occurs immediately call your physician. If the chemical is on the skin or in the eyes, flush with cool water for 15 minutes. If the chemical was swallowed, immediately give the person water or milk. Do not give water or milk if the patient is vomiting or has a decreased level of alertness. Do not induce vomiting.



- Battery Posts, terminals and related accessories contain lead and lead compounds (acid), chemicals known to cause cancer, reproductive harm and are toxic and corrosive. Never open the battery.

- Tampering or modifying the electric circuit system may cause a shock, fire or explosion and permanently damage the system. Exposed wiring and circuitry in the charger may cause electric shock. Always keep the charger housing closed.

**Important!** Before using the unit for the first time the battery needs to be charged for 15 to 18 hours, Only an adult who has read and understands the safety warnings should handle, charge or recharge of the battery (see Maintenance).

**Note:** It is not necessary to remove the battery from the vehicle for charging. However, if the adapter cord will not safely reach a 110-120 volt wall outlet, the battery can be removed for charging.

## Radio Frequency Information

**Caution:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**NOTE:** This equipment has been tested and found to comply with the limits for the Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## User Requirements

The suitable age range for a child using the vehicle is 3 to 5 years. The maximum weight of the child is 65 lbs (30 kg).

Before using the vehicle the child must understand the controls and safety issues.

They must also demonstrate the capability to handle the vehicle and operate its controls.

**It is the responsibility of the adult to educate the child, determine if they are fit to operate the vehicle, and supervise use.**

Here are basic safe riding rules you should read aloud to your child and anyone who may use the vehicle:

- An adult must always supervise a child that is using the vehicle.
- Always sit in the seat when using the vehicle.
- Keep your hands, hair and clothes away from moving parts. Always wear shoes when using in the vehicle.
- Do not use the vehicle on streets or near cars.
- Children under three years old should not be allowed use the vehicle.
- Only drive on level ground. Don't go near water, drop-offs or up and down steep slopes.
- Don't drive the vehicle in loose dirt, mud, sand or fine gravel. Using the vehicle in loose dirt, mud, sand, or fine gravel may damage the electronics and gear box inside the vehicle.




## Parts List

No.	Description
1	Body
2	Door, Left
3	Door, Right
4	Steering Wheel Assembly
5	Windshield
6	Mirror, Left
7	Mirror, Right
	Mirror Screws (x2)
8	Seat
9	Drive Motor
10	Drive Wheel
11	Wheel (x3)
12	Axle
13	Motor Cover
	Motor Cover Screws (x4)
14	Wheel Cover (x4)
	Wheel Cover Screws (x3 per wheel)
15	Axle Washers (x8)
16	Locknut (x4)
17	Hubcaps (x4)
18	Wheel Bushing (x7 - total for vehicle)
19	Steering Rod
20	Cotter Pin
21	Battery Charger
22	Spanner Socket (x2)
23	Steering Rod Washers (x2)

**NOTE:** Loose parts are packaged in plastic bag.

# 1 Drive Battery First Charge

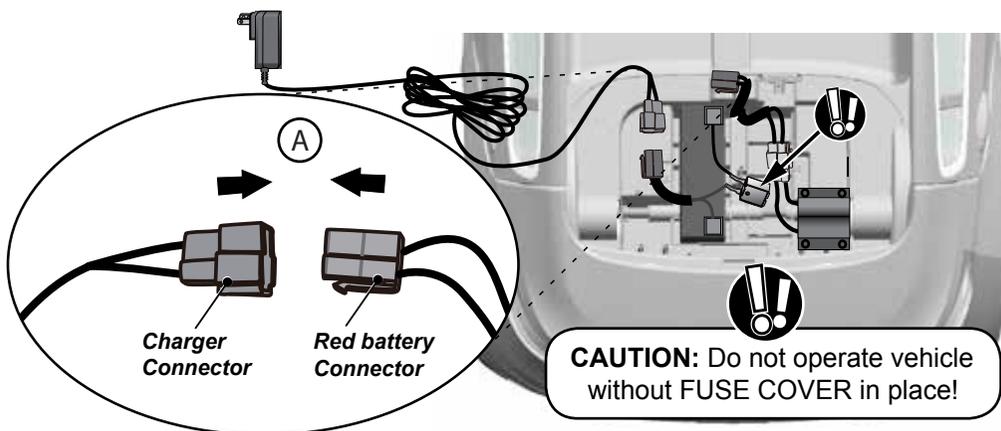

**NOTE:** Before first use, charge battery 15 to 18 hours.

**NOTE:** It is easier to charge the Drive Battery before beginning assembly:

1. **Ensure power switch is OFF.**
2. Plug the **charger connector** into the **red battery connector (A)** (Only use the 6V charger included with the vehicle, input: AC 120V, 60Hz output: DC 6V), Plug the charger into a standard 110V wall outlet.


**NOTE:** The charger may feel warm during the charging. This is normal and not a cause for concern. If excessively hot, unplug and replace.

### 3. **After first charge is complete:**

- Unplug the charger from the wall outlet.
- Unplug the **charger connector** from the **red battery connector**.

**Proceed to vehicle assembly:**



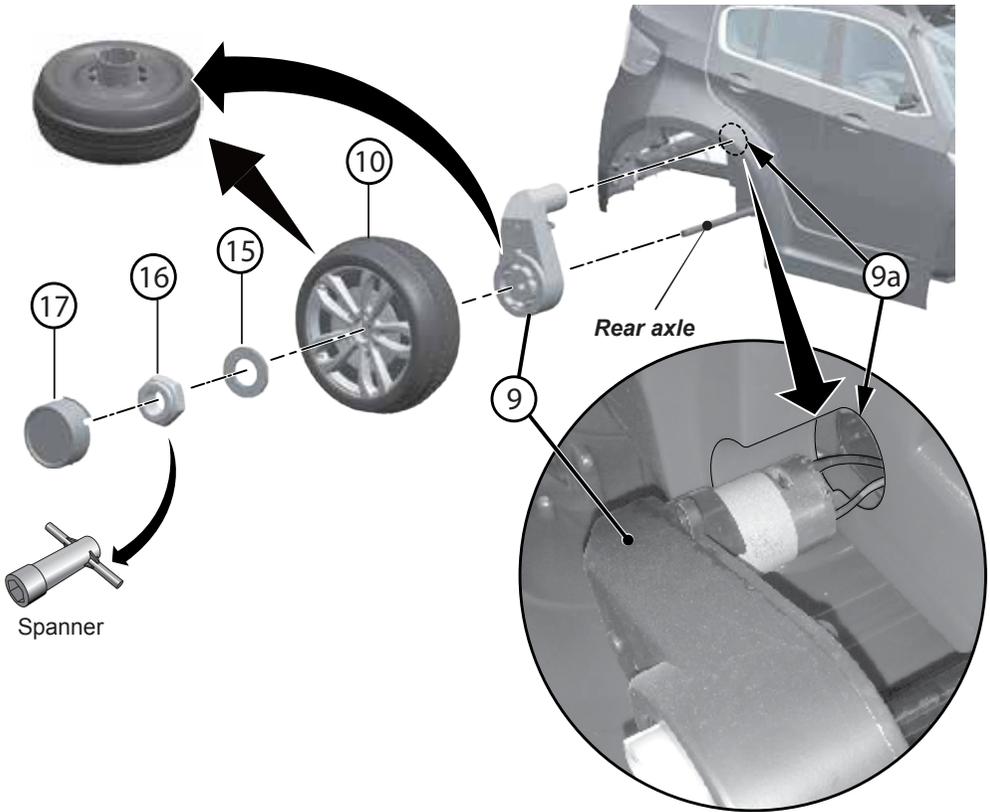


**NOTE:** Begin by turning the vehicle upside down and removing nuts and washers from axle.

1. Slide the Motor (9) onto the rear axle (right side).
2. **Feed the Plug and Wires and Motor-End through Motor Hole (9a).**
3. Slide the Drive Wheel (10) onto the rear axle. Ensure the **Drive Wheel Gear** matches with the **Motor Gear Inset**.
4. Slide Washer (15) onto the rear axle.
5. Install Locknut (16) onto the end of the rear axle - hand tight.

**Proceed to Left Rear Wheel Installation on next page.**



### 3 Installing the Left Rear Wheel

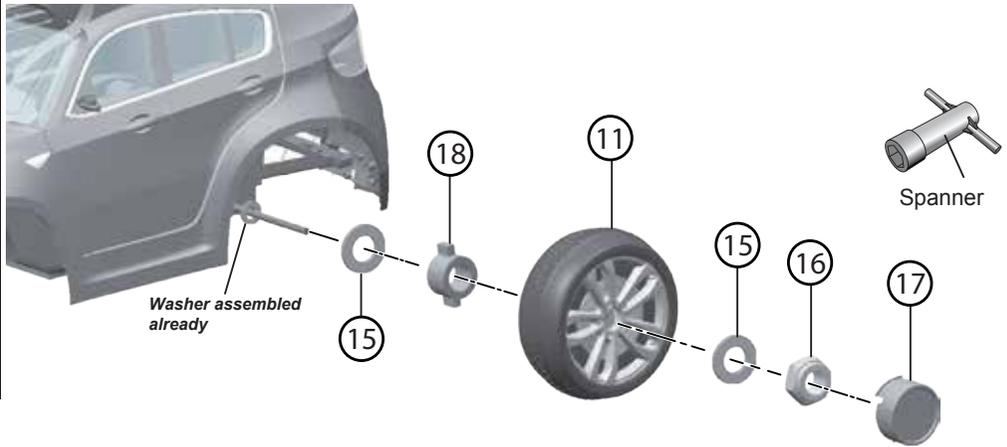

**NOTE:** With vehicle still upside down, remove nut and washer from axle.


1. Slide Washer (15) onto the rear axle.
2. Slide the Bushing (18) into the indent in the back of the Wheel (11) (it will sit even with the back of the wheel).
3. Slide the Wheel onto the rear axle. Ensure Bushing stays in place in Wheel.
4. Slide Washer (15) onto the rear axle.
5. Install Locknut (16) securely on the end of the rear axle with Spanner Wrench.

**Hint:** An extra Spanner has been provided to hold the locknut on one side of the rear axle while tightening the locknut on the other side.

**⚠ WARNING:** Ensure both Lock Nuts (16) are FULLY seated on axle using both Spanner Wrenches. When Nuts are fully seated, there will be very little side-to-side looseness in the wheel and there will be Axle threads showing through the Lock Nuts.

6. Align the two tabs of the Hubcap (17) with the slots of the wheel cover, and press the Hubcap firmly into place.

**NOTE:** If needed, the Hubcaps (17) can be removed by using a straight-slot screw driver.

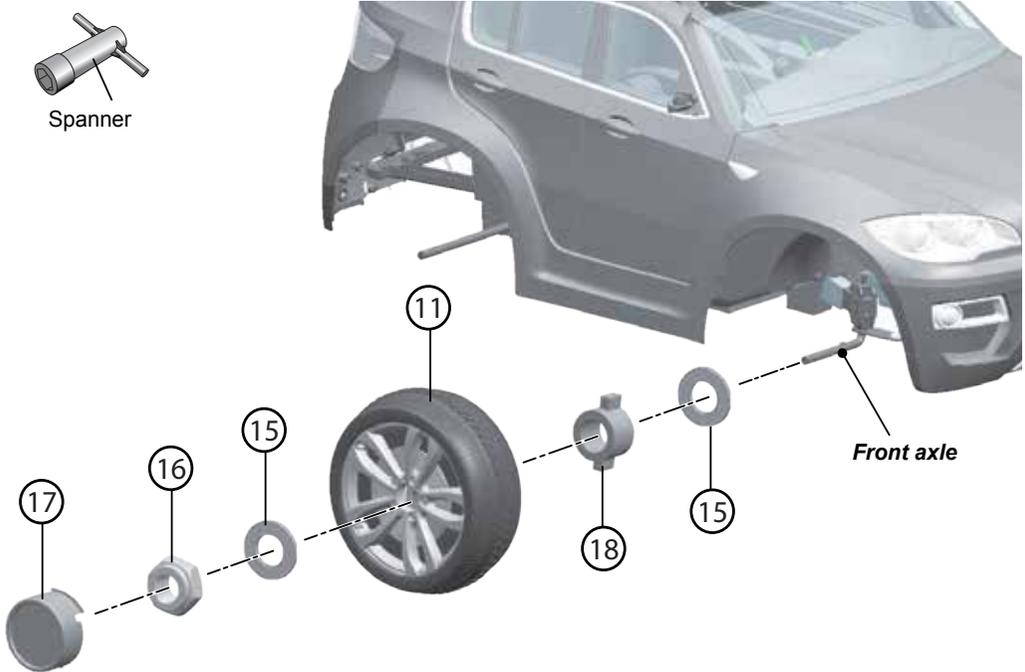

**NOTE: Begin by removing nuts and washers from axles.**

1. Slide Washer (15) onto the Front Axle.
2. Slide the Bushing (18) into the indent in the back of the Wheel (11) (it will sit even with the back of the wheel).
3. Slide the Wheel onto the Front Axle. Ensure Bushing stays in place in Wheel.
4. Slide Washer (15) onto the Front Axle.
5. Install Locknut (16) securely on the end of the Front Axle with Spanner Wrench.


**⚠ WARNING:** Ensure both Lock Nuts (16) are FULLY seated on axle using both Spanner Wrenches. When Nuts are fully seated, there will be very little side-to-side looseness in the wheel and there will be Axle threads showing through the Lock Nuts.

6. Align the two tabs of the Hubcap (17) with the slots of the wheel cover, and press the Hubcap firmly into place.



**Repeat the above steps for the other front wheel.**

**NOTE:** If needed, the Hubcaps (17) can be removed by using a straight-slot screw driver.

## 5 Installing the Steering Rod

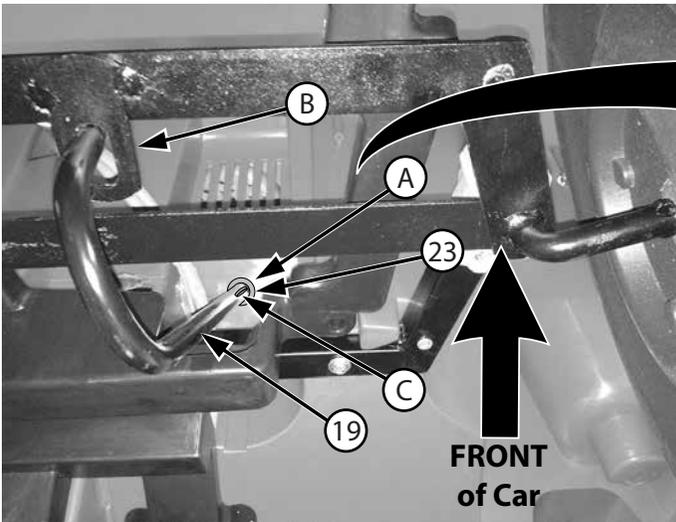

FRONT  
of Car

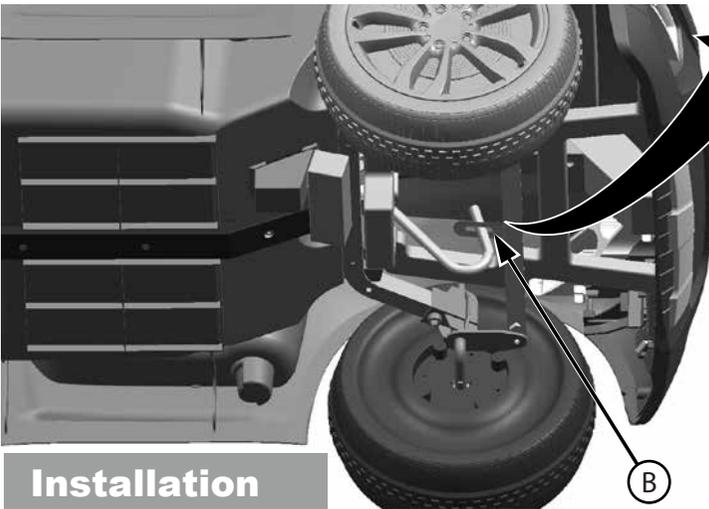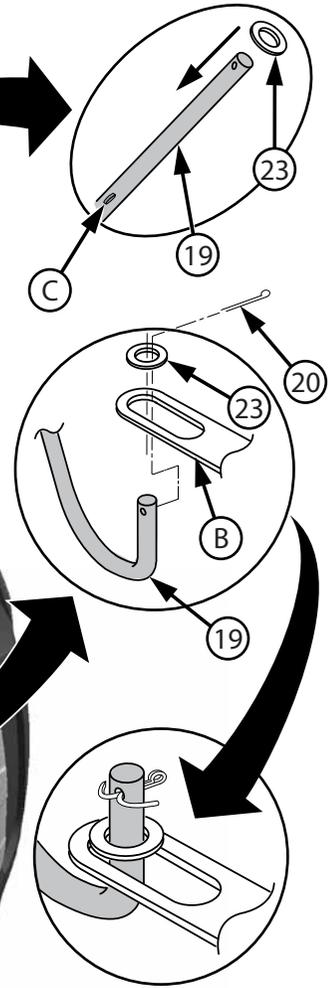

### Installation

1. Locate the Steering Rod Hole (A) and Steering Slot (B).
2. Place a Washer (23) over the long end of the Steering Rod (19) and slide up to rod Dimple (C).
3. Insert the long end of the Steering Rod (19) through Hole (A).
4. Insert the short end of the Steering Rod into slotted Hole (B) as shown.
5. Push the Steering Rod through the hole until the rod Dimple (C) is against the body.
6. Place washer (23) over end of Steering Rod as shown.
7. Insert Cotter Pin (20) through Steering Rod and bend ends around as shown.

**⚠️ WARNING:** Connect the **red** to **red** connectors, and **white** to **white** connectors. Connecting incorrectly can damage the battery and/or motor.

FRONT  
of Car  
Under Seat

white Connector

white motor connector

(A)

1. Plug the **white motor connector** into the white Drive Switch connector as shown above.

**⚠️ CAUTION:** Do not operate vehicle without FUSE COVER in place!

red connector


red battery connector

Fuse box

(B)


2. Plug the **red battery connector** into the red Drive Switch connector as shown above.

## 7 Installing the Motor Cover

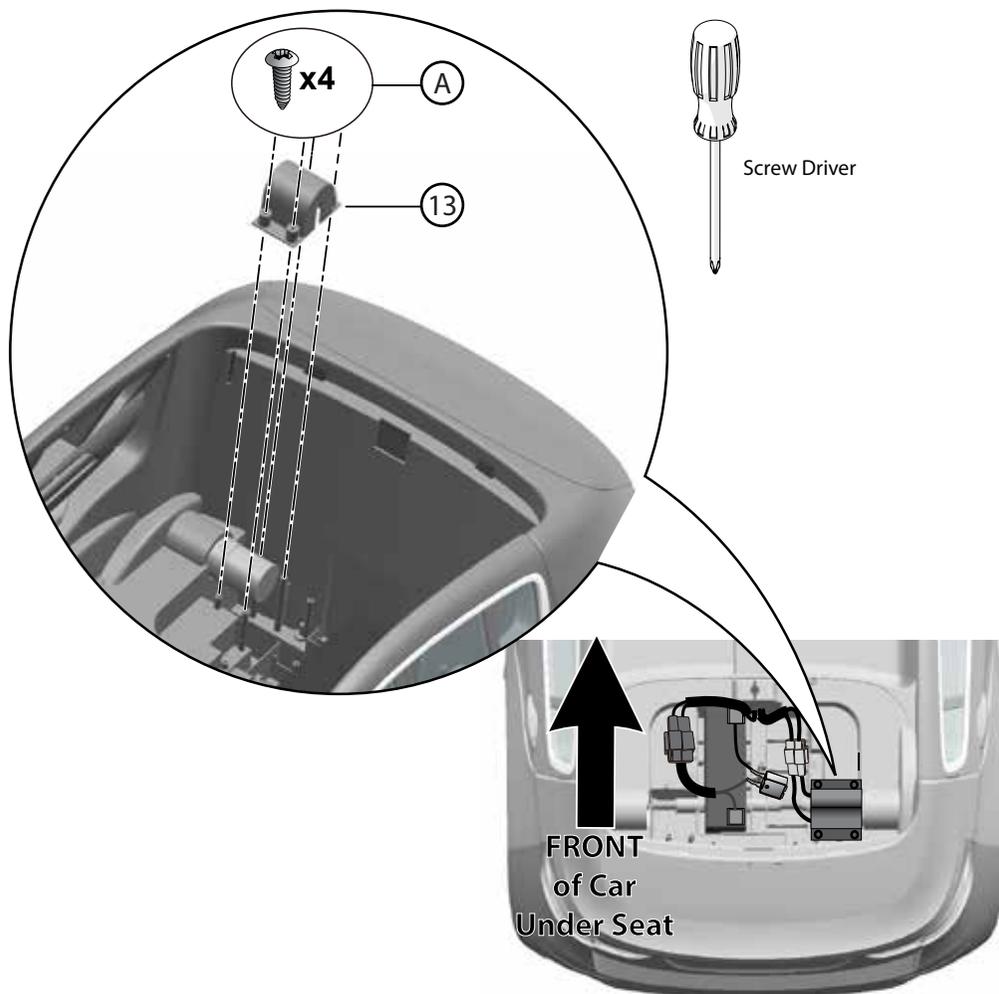

### Installation

1. Fit the **Motor Cover** (13) on the motor.
2. Install four **Screws** (A) securely.

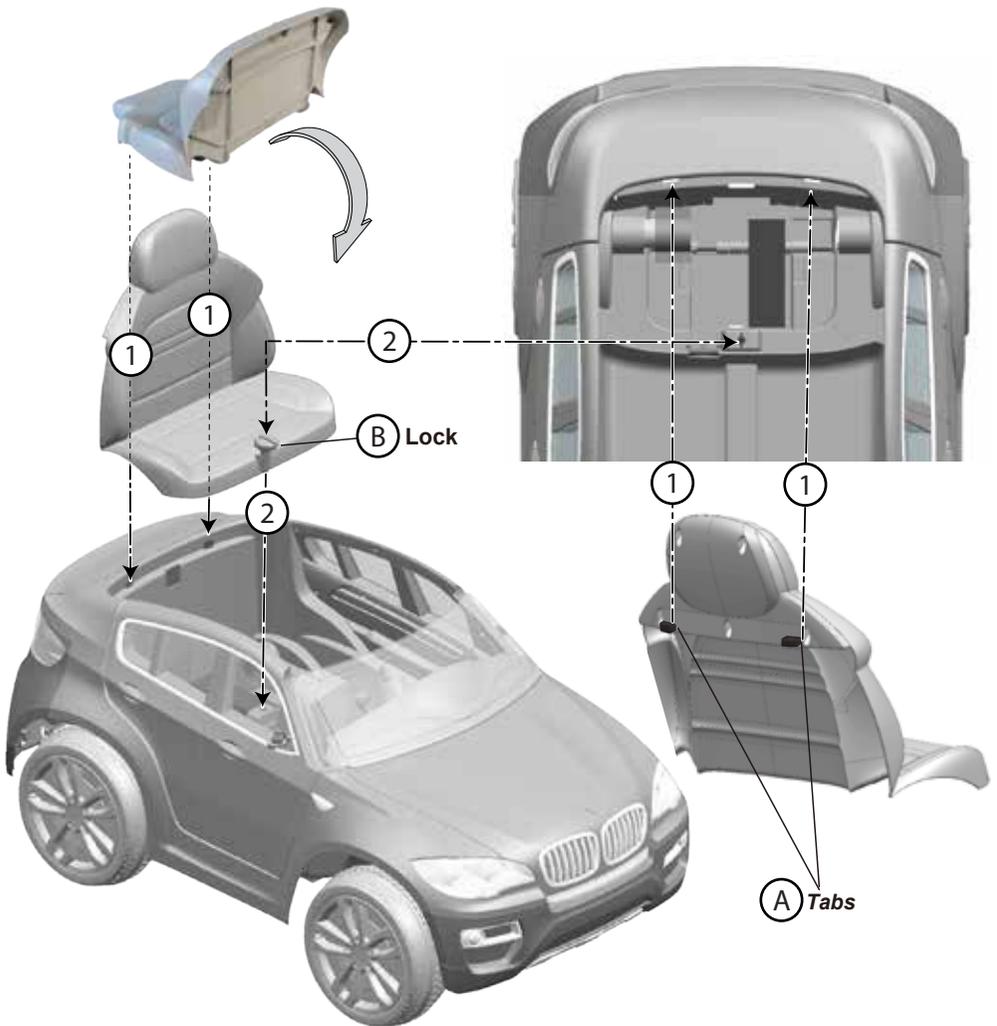

## Installation


1. Align the **Tabs (A)** on the back of the seat with the **slots** in the back of the **main body**.
2. Align the **Lock** on the front of the seat with the **hole** in the middle of the **main body hole**. Be sure the lock is oriented so it will fit into the slot.
3. **Rotate and lower** the seat onto the main body, Ensure the seat **tabs** stay in the slots and the **Lock (B)** into the main body hole.
4. Using a coin or large screwdriver turn the **Lock** on the front of the seat to secure the seat to the main body.

**CAUTION:** Ensure no wires or connectors are pinched under the seat.

## 9 Installing the Steering Wheel and Batteries

### Installation

1. Remove the **screw** from the **steering wheel (A)**.
2. Place the **steering wheel (B)** over the **steering column**.
3. Align the **holes** on each side of **steering wheel** with the holes at the end of the **steering column**.
4. Insert the **screw (A)** through the steering wheel and steering column, into the nut. Tighten securely.




Screw Driver


### ⚠ WARNING!


- Batteries must be installed by Adult.
- DO NOT mix old and new batteries.
- DO NOT mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- DO NOT charge non-rechargeable batteries. Always have adult supervision when charging rechargeable batteries.

If you wish to use the sound effects, install two AA batteries (non provided) using the following steps:

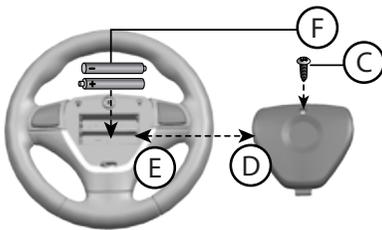

5. With a small screwdriver remove the **screw (C)** on the **battery cover (D)** located in the center of the steering wheel.
6. Remove the **battery cover (D)** from the top of the **battery compartment (E)**.
7. Insert two **AA batteries (F)** oriented as shown in the battery tray.
8. Place the **battery cover (D)** over the **battery compartment** and fasten with the **screw (C)** removed above.

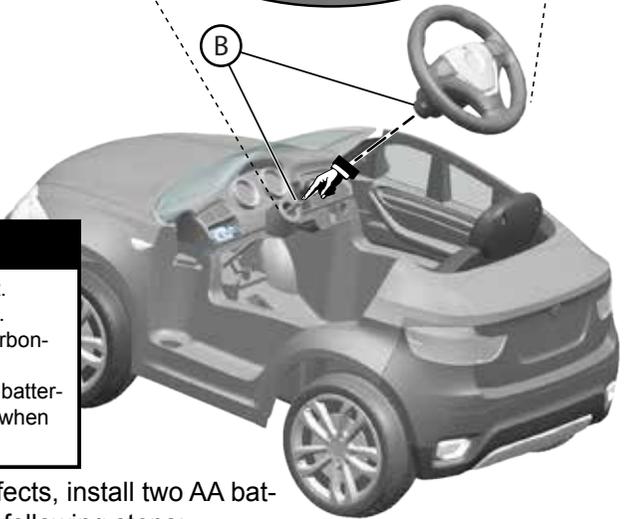

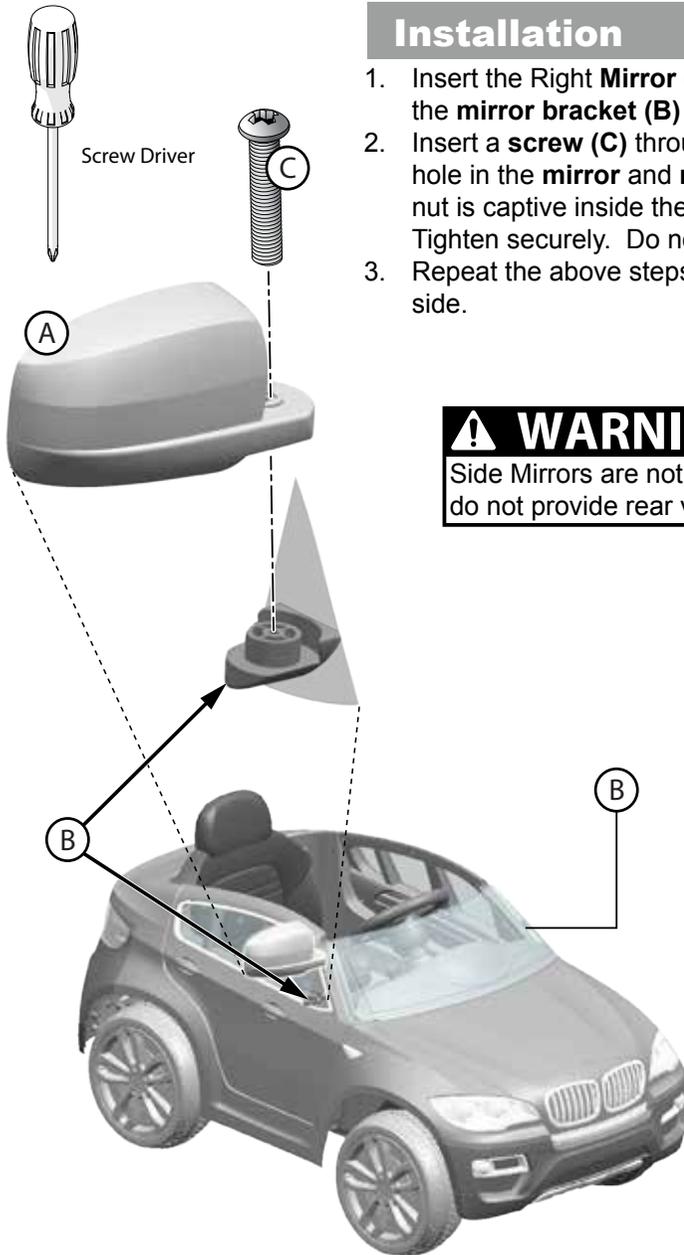

## Installation

1. Insert the Right **Mirror (A)** into the slots of the **mirror bracket (B)** located on the door.
2. Insert a **screw (C)** through the top of the hole in the **mirror and mirror bracket** (the nut is captive inside the mirror bracket). Tighten securely. Do not over-tighten.
3. Repeat the above steps for the opposite side.

**⚠ WARNING!**  
Side Mirrors are not reflective and do not provide rear visibility.




**This vehicle is equipped with Door Locks (A) on each door.**

- To operate the Door Locks, close door completely and slide Door Lock DOWN into Frame Lock Slot (B) fully. Test by pulling outward gently on door.

**NOTE:** Do not shut door with Door Lock extended. This will prevent the door from closing and may damage the Door Lock.

**⚠ WARNING:**

- Failure to ensure Door Lock is fully locked can result in child's injury.
- Do not let child operate vehicle without Door Locks fully locked.

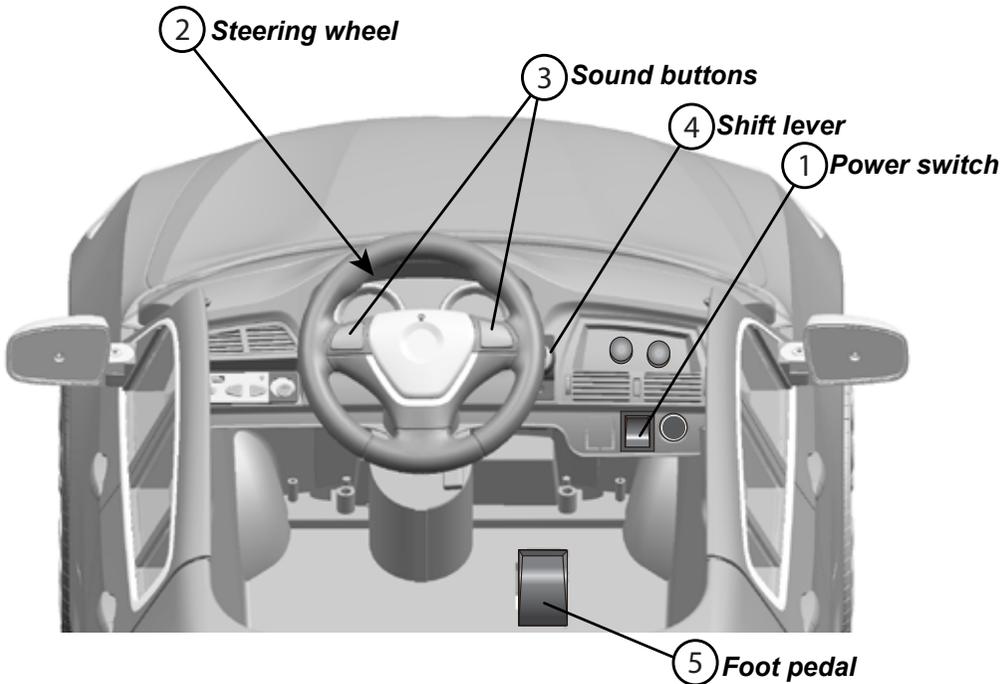

## To Operate the vehicle:

- 1. Power Switch:** Turns the vehicle on and off. Rock the switch to “ON” position to turn the vehicle on, - “OFF” position to turn it off. Leave OFF when not in use.
- 2. Steering wheel:** Use to steer the vehicle in the direction you want to move.
- 3. Sound Effects:** Press the buttons on the sides of the steering wheel. Each button will make a different sound.
- 4. Shift Lever:** Changes the direction the vehicle moves from forward to reverse.
  - To move the car forward, shift the lever up.
  - To move the car backward, shift the lever down.
  - Shift the lever in the middle, the car will stop and not run.

**CAUTION:** To avoid damaging the motors and gears, DO NOT shift the lever when the car is moving.

- 5. Foot pedal:** Applies power (speed) to the vehicle.
  - To move the car, press the pedal down.
  - To brake or slow down, release pressure from the pedal.

**⚠ WARNING:** Use on level ground ONLY. Motor friction will gradually stop the unit. **Vehicle will roll down a steep incline, even when turned off.**

## Maintenance - General Information

The vehicle should be checked for damage, missing or badly worn parts before each use.

- Check the tightness of the fasteners before each use.
- Check the tightness of the wheels:
  - **Note:** If the drive wheel is not tight, it will not engage the gears and the vehicle will not run.
  - Use a flat head screwdriver to remove the hubcaps.
  - Ensure the axle is fully engaged in the lock nut.
  - Replace the hubcaps.
- Ensure the battery bracket is securely in place before use.
- Store the vehicle indoors. Keep it away from sources of heat, such as stoves and heaters.
- Clean the vehicle with a soft, dry cloth. To restore shine to plastic parts, use a non-wax furniture polish. Do not use automotive wax, abrasive cleaners or wash the vehicle with soap and water.

 **WARNING:** Water will damage the motor, electrical system and battery.

## Drive Battery

Only an adult who has read and understands the safety warnings should handle, charge or recharge the battery. Failure to comply with all safety warnings may result in serious injury or death.




## Battery Fuse

The drive motor circuit features a thermal fuse that will automatically trip and cut all power to the vehicle if the motor, electric system or battery is overloaded. The fuse will reset and power will be restored after the unit is turned OFF for approximately five minutes. If the thermal fuse trips repeatedly during normal use, the vehicle may need repair.

**To avoid losing power, follow these guidelines:**

- Do not overload the vehicle.
- Do not tow anything behind the vehicle.
- Do not drive up steep slopes.
- Do not drive into fixed objects, which may cause the wheels to spin, causing the motor to overheat.
- Do not drive in very hot weather, components may overheat.
- Do not allow water or other liquids to come in contact with the battery or other electric components.
- Do not tamper with the electrical system. Doing so may create a short, causing the fuse to trip.

## Charging the Drive Battery

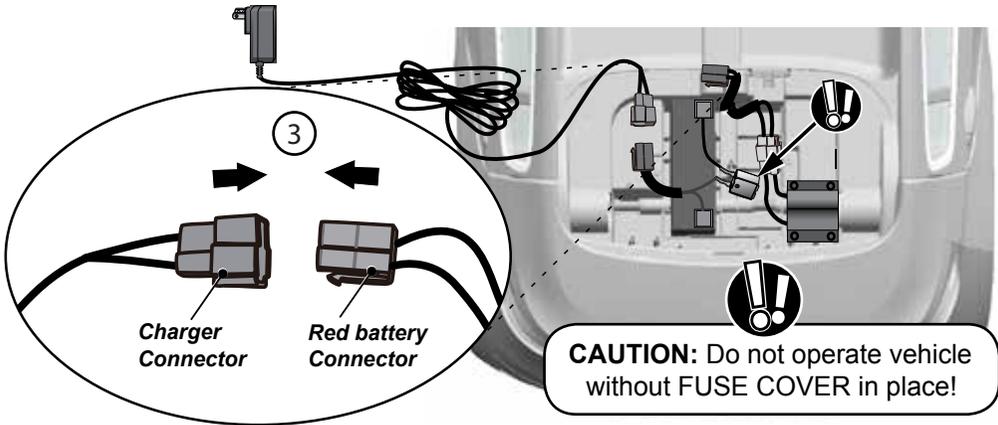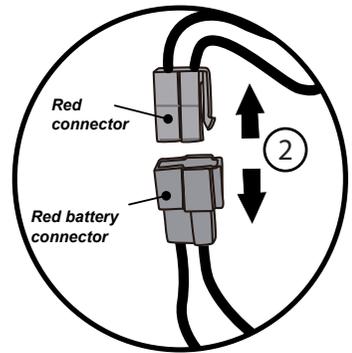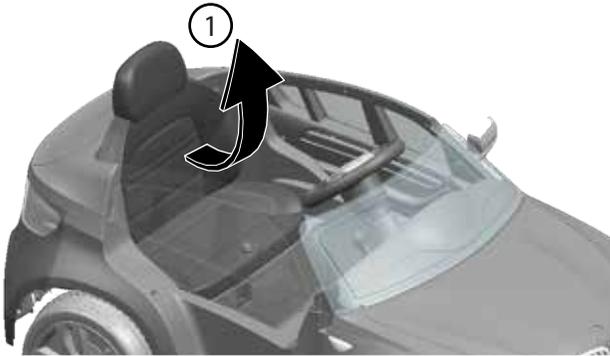

**NOTE:** Before first use, charge battery 15 to 18 hours.

1. **Ensure power switch is OFF.** Remove the **seat** (Refer to Seat Section) - use a coin or screwdriver to unlock the **lock** in front middle of the seat.
2. Unplug the **red battery connector**: Push the connectors fully together, then press in the locking clip. Then pull connectors apart.
3. Plug the **charger connector** into the **red battery connector** (Only use the 6V charger included with the vehicle, input: AC 120V, 60Hz output: DC 6V), Plug the charger into a standard 110V wall outlet.
4. After charging is complete (at least 8 hours, but not more than 12 hours)
5. Unplug the charger from the wall outlet.
6. Unplug the **charger connector** from the **red battery connector**.
7. Reconnect **red connectors**.
8. Replace Seat (see Seat section).

**CAUTION:** Ensure no wires or connectors are pinched under the seat when reinstalling.

**NOTE:** The charger may feel warm during the charging. This is normal and not a cause for concern. If excessively hot, unplug and replace.

## Re-charge Interval and Time

### Important!

Check the drive battery and charger (supply cord, connector) for wear and damage before charging. Do not charge the battery if damage has occurred. Only replace with the same type 6V rechargeable battery and charger supplied by the manufacturer.

- Only use the rechargeable battery (or equivalent replacement) and charger supplied with your vehicle.
- Before first use, charge battery 15 to 18 hours - never longer than 18 hours.
- Once battery is depleted, recharge for 8 to 12 hours - never longer than 12 hours.
- Do not short circuit the battery: Do NOT connect red and black wires together or connect positive and negative terminals on the battery together.
- When battery is fully charged, un-plug charger from the wall outlet and disconnect from charger port.

The drive battery should be charged when depleted, or if not used regularly, once a month. Failure to charge the battery as directed will cause permanent damage to the battery and will void the warranty.

## Battery storage

Do not leave the battery connected in the vehicle for long period of times while not being used. This may drain the battery completely and cause permanent damage. Disconnect the battery connectors from the battery when the vehicle is not going to be used for a long period of time. Follow these guidelines if the battery is removed:

- Do not store battery in extreme hot or cold temperatures.
- Do not place the battery on cement floors for extended periods. This will result in battery discharge. Store the battery on a wood surface.
- Wipe the battery clean with a dry cloth prior to storage. Wash cloth separate from other clothes.

## Drive Battery Replacement and Disposal

The 6V battery will eventually lose the ability to hold a charge. Depending on the amount of use, and varying conditions, the battery should operate for one to three years. Follow these steps to replace and dispose the battery:

1. Remove the seat.
2. Disconnect the battery connectors.
3. Remove the metal battery bracket.
4. Remove battery cover.
5. Carefully lift the battery.
  - Depending on the condition of the battery (i.e.: leakage) you may want to wear protective rubber gloves before removal.
  - Do not lift the battery by its connectors or cables.
6. Place the dead battery in a plastic bag.

### Important!

- The sealed lead-acid battery must be recycled or disposed of in an environmentally sound manner.
- Do not dispose of battery in a fire. The battery may explode or leak acid.
- Do not dispose of the battery in household trash. The incineration, land filling or mixing of sealed lead-acid batteries with household trash is prohibited by law.
- Return an exhausted battery to a federal or state approved lead-acid battery recycler, such as a local seller of automotive batteries (check local battery disposal regulations).

**NOTE:** Replacement batteries are available at most battery supply stores. Document battery size and type (found on battery).

7. Install replacement battery and reconnect the connectors.
8. Replace battery cover being careful not to pinch any wires.
9. Replace the metal battery bracket.
10. Replace the seat.



**CAUTION:** Do not operate vehicle without FUSE COVER in place!

## Troubleshooting Guide

The following are examples of potential problems. Completely read through this manual and the troubleshooting guide table before calling. If you still need help resolving the problem please contact Customer Service.

**NOTE:** Vehicle should be turned off and fully charged before doing troubleshooting.

Problem	Possible Cause	Solution
Vehicle does not run	Battery low on power	Recharge battery (see Battery: Recharge interval and time)
	Thermal fuse has tripped	Let Fuse reset
	Battery connector or wires are loose	Check that the battery connectors are firmly plugged into each other. If wires are loose around the motor call Customer Service.
	Battery is dead	Replace battery (see Battery: Replacement and Disposal)
	Electrical system or motor is damaged	Call Customer Service.
Vehicle does not run very long	Battery is undercharged.	Check that the battery connectors are firmly plugged into each other when recharging (see Battery: Recharge interval and Time)
	Battery is old and cannot be fully charged	Replace battery (see Battery: Replacement and Disposal)
Vehicle runs sluggishly	Battery low on power	Recharge battery (see Battery: Replacement and Disposal)
	Battery is old and cannot be fully charged	Replace battery (see Battery: Replacement and Disposal)
	Vehicle is overloaded	Reduce weight on vehicle (see user requirements and Safety Warnings)
	Vehicle is being used in harsh conditions	Avoid using vehicle in harsh conditions (see User Requirements and Safety Warnings)
Vehicle makes loud noise when in use	Chain is dry (on chain drive models)	Lubricate chain with light oil.

continued >>

## Troubleshooting Guide - continued

Problem	Possible Cause	Solution
Vehicle will not run when Switch is pressed.	Poor contact of wires or connectors	Check that the battery connectors are firmly plugged into each other. If wires are loose around the motor call Customer Service.
	"Dead Spot" on motor	A dead spot means the electric power is not being delivered to the terminal connection and the vehicle needs repair. Call Customer Service.
Loud grinding or clicking noises coming from motor or gear box	Motor or gears are damaged	Call Customer Service.
	Drive Wheel is partially engaged	Check drive wheel - to motor engagement.
Battery will not recharge	Battery connector or adapter connector is loose	Check that the battery connectors are firmly plugged into each other.
	Charger not plugged in	
	Charger is not working	Check that the battery charger is plugged into a working wall outlet.
	Battery is dead	Replace battery.
Charger feels warm when recharging	This is normal and not a cause for concern	If excessively hot, unplug and replace.

## Limited Warranty

### General:

- Part or model specifications are subject to change without notice.
- This Limited Warranty is the only warranty for the product. There are no other express warranties.
- The only uses for this product are described in this manual.
- Warranty registration is not required.
- The Limited Warranty extends only to the original consumer and is not transferable to anyone else.

### What does this Limited Warranty cover?

This Limited Warranty covers all parts of the product except those indicated below as not warranted.

### What must you do to keep the Limited Warranty in effect?

This Limited Warranty is effective only if:

- Product is completely and correctly assembled.
- Product is used under normal conditions for its intended purpose (see the following section for excluded activities).
- Product receives all necessary maintenance and adjustments.
- Product is used for general transportation and recreational use only.

### What is not covered by this Limited Warranty?

This product is designed for recreational use only. This Limited Warranty does not cover normal wear and tear, normal maintenance items, or any damage, failure, or loss that is caused by improper assembly, maintenance, adjustment, storage, or use of the product.

### This Limited Warranty will be void if the product is ever:

- Used in any competitive sport
- Used for stunt riding, jumping, aerobatics or similar activity
- Modified in any way
- Modified with the addition of a motor
- Ridden by more than one person at a time
- Rented, sold, or given away

- Used in a manner contrary to the instructions and warnings in this Owner's Manual

Huffy will not be liable for incidental or consequential loss or damage due directly or indirectly from use of this product. Some States do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation may not apply to you.

### What will Huffy do?

Huffy will replace, without charge to you, any part, or component found to be defective by Huffy.

### How do you get service?

Contact the Customer Service Department.

- See included list for Customer Contact information or visit [www.huffybikes.com/contact](http://www.huffybikes.com/contact).

### What rights do you have?

This warranty gives you specific legal rights. You may also have other rights which vary from State to State.

### How long does this Limited Warranty Last?

- Drive Battery - 30 days
- Electronics - 90 days
- All other Components - 6 months
- All parts are subject to the Conditions of Warranty below.

### This product meets ASTM F963 and CP-SIA requirements for electric vehicles.





[ In the US ]  
**PLEASE - BEFORE RETURNING TO STORE,  
CONTACT HUFFY CUSTOMER SERVICE. WE  
ARE GLAD TO ASSIST YOU WITH ANY PARTS  
OR ASSEMBLY PROBLEMS YOU MIGHT  
HAVE!**

For Fast Customer Service, go to:

<http://www.huffybikes.com/contact>

To Order Parts (US only), go to:

<http://www.huffybikes.com/parts>

OR TEL: 1 800 872 2453 (US only)

For email, go to <http://www.huffybikes.com/contact>

[ CANADA ]

**VEUILLEZ NOTER : AVANT DE  
RETOURNER AU MAGASIN,  
COMMUNIQUEZ AVEC LE SERVICE  
À LA CLIENTÈLE DE HUFFY. NOUS  
VOUS AIDERONS VOLONTIERS AVEC  
TOUT PROBLÈME CONCERNANT LES  
PIÈCES OU LE MONTAGE!**

Pour un Service à la clientèle rapide, allez sur le  
site :

<http://www.huffybikes.com/contact>

To Order Parts (CANADA only), go to:

<http://www.huffybikes.com/parts>

OU appelez le 1 800 872 2453  
(CANADA only)

Pour communiquer par courriel  
[huffycanada@huffy.com](mailto:huffycanada@huffy.com)

[ MÉXICO ]

**ANTES DE DEVOLVER EL  
PRODUCTO A LA TIENDA,  
COMUNÍQUESE CON SERVICIO  
AL CLIENTE DE HUFFY. NOS  
COMPLACE AYUDARLO CON  
CUALQUIER PARTE O PROBLEMA  
DE ENSAMBLADO QUE PUDIERA  
TENER.**

Para obtener Servicio al cliente rápido, visite:

<http://www.huffybikes.com/>

● LLAME AL TEL: 01800 1483 391  
(Mexico only)

Para comunicarse por correo electrónico:  
[servicio@huffymex.com](mailto:servicio@huffymex.com)

---

Check <http://www.huffybikes.com/home/globalcontact>  
for the current contact information

---

<http://www.huffybikes.com/home/globalcontact>  
para obtener la información de contacto actual

---

Vérifier <http://www.huffybikes.com/home/globalcontact>  
pour les informations de contact actuelles